




Imenco ROV Shackle – Safety Note

Points to verify that the IMENCO ROV Shackle is correctly locked and secured.

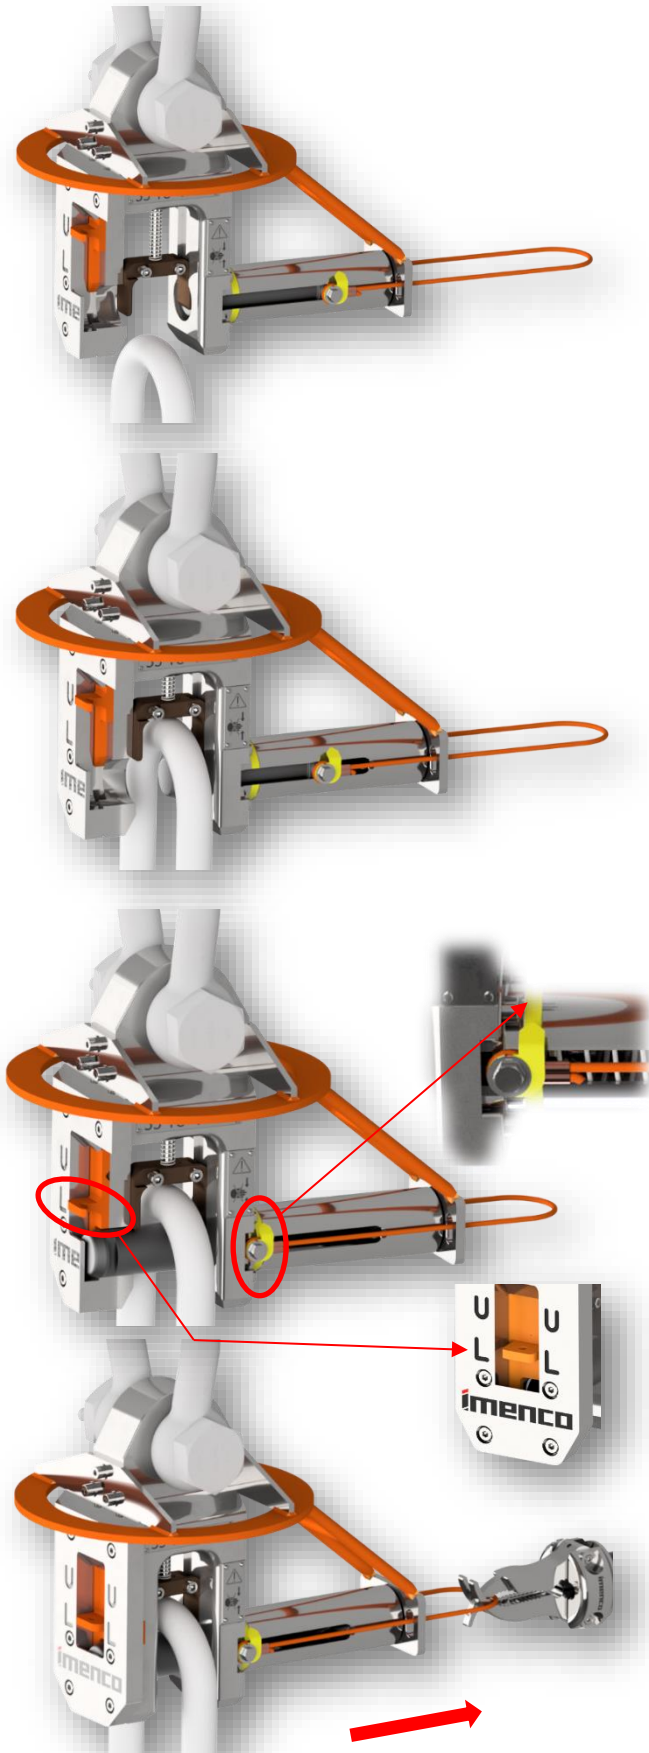

Step 1-2: Guide the ROV Shackle opening over the lifting point
(ROV Shackle shown partly sectioned)

Step 3-4: Enter the lift point in the ROV shackle opening pushing the Pin Retainer upwards and thus releasing the Shackle Pin.
(ROV Shackle shown partly sectioned)

Step 5: When the Shackle Pin is fully engaged, push the Locking Plate downwards to the locked position "L" securing the pin. Verify the minimum push-down force, as per information marked on shackle. Also check that the yellow markers are aligned with the yellow ring on the spring housing.
(ROV Shackle shown partly sectioned)

WARNING! If this operation is performed manually keep hands and fingers away from the ROV Shackle opening

Step 6: Pull the release wire to determine if the lock plate is properly engaged with the shackle pin.

The ROV Shackle is now connected and ready for the lifting operation.